

Dim-to-Warm - Wiring Diagrams

APT-CC-VS-M1-xxxxDW



Note: The output CCT range can be set using the APT Programmer